








 <p>NOKIA Connecting People 诺基亚</p>	<p>Symbian s60 v3.0</p>	<p>N71, N73, N75, N76, N77, N78, N80, N81, N82, N91, N92, N93, N93i, N95, , N96, N97, E50, E65, E61, E61i, E62, E60, E70, E71, E66, E90, 5700, 6110, 6120, 6220, 6121, 6122, 6290, 6110Navigator, N80, 3250, 5500, 5700, 5320, 5800, 6210N, 6220, 6650F, E63E66, E71, N79, N85, N96, E61i</p>
	<p>Mobile Pocket PC</p>	<p>MPX220、MPX、Q8、Q7、V1000</p>
	<p>symbian s60 v3.0</p>	<p>I400, i408, i450, i458, i500, i550, i520, i560, i570, i558, G810, G818, I8510</p>
	<p>Mobile Pocket PC</p>	<p>686, 696, 696i, 699, 700, 818, 828+, 838, 900, 830 MUSE, CHT9000, P800, M700, C858, 9100, 9110, D600, U1000, P4550, P3450, D802, E806c, S1, P5500, E616, P860, D805, Touch DUAL, Diamond, P3470, P660, S600, S900, X7510, C730, E616, E806c, P3600i, P4550, P860, U1000, 699, 818 Pro, 818, P9000, 700, 696i, E806c, S700, S730, C858, 900</p>
	<p>Mobile Pocket PC</p>	<p>ET-280, ET-560, ET-580, ET-960, ET-980, XP618, ET860, ET800, ET600</p>
	<p>Mobile Pocket PC</p>	<p>N810, N800, N8, E870, E860, E800, E850, N7</p>
	<p>Mobile Pocket PC</p>	<p>P51, P50</p>
	<p>Mobile Pocket PC</p>	<p>O2 Cocoon, O2 Flame, O2 Helen, O2 XDA Atom, O2 XDA Graphite, O2 XDA Zinc, O2 XDA Argon, O2 Cosmo, O2 XDA Atom, O2 XDA Orbit, O2 XDA Stealth</p>
	<p>Mobile Pocket PC</p>	<p>惠普, iPAQ rw6818, HW6515</p>
	<p>Mobile Pocket PC</p>	<p>M930w, P320, P560, 兰博基尼ZX1, P526, P735, P535, P750, P550</p>
<p>GIGABYTE</p>	<p>Mobile Pocket PC</p>	<p>MS800, MS804, MS808, MS820, G-Smart I, i128, i300C, i350, t600, i300</p>